


NOTES

1. SEE TYPICAL EQUIPMENT MOUNTING HEIGHTS BEGINNING ON SHEET 7.01.01.


KEY NOTES

- 1. MOUNT 1-A5145, HOOK, AT 1372 [4'-6"] AFF AND 1-A5145 AT 1524 [5'-0"] AFF.
 2. PROVIDE A5109 AND A5110, GRAB BARS, THAT COMPLY WITH ADA.
 3. DO NOT PROVIDE GOOSENECK STYLE FAUCET.

- 3. UN OFF FAMILE SUGGESTERS THE FAULET.
 4. WHERE FEASIBLE, SLOPE TOLLET ROOM FLOOR TOWARDS THE SHOWER.
 5. MOUNT 1-A5165, SHELF, AT 1219 [4'-0'] AFF, AND 1-A5165 AT 1524 [5'-0'] AFF.
 6. MOUNT A5145, HOOK, AT 1219 [4'-0'] AFF.
- MOUNT A5047. MEDICINE CABINET, WITH BOTTOM OF REFLECTIVE SURFACE AT 1016 [3'-4"] IN 10% OF ALL LDRP ROOMS.

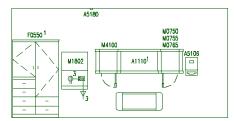


WEST

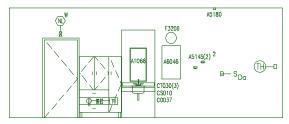

EAST

- MOUNT 1-A5145, HOOK, AT 1372 [4'-6"] AFF AND 1-A5145 AT 1524 [5'-0"] AFF.
 CODRDINATE LOCATION OF ELECTRICAL OUTLETS WITH M1802, WALL MOUNTED, FOLD DOWN COMPUTER.
- 1. SEE ELEVATIONS OF F0550, RESUSCITATION ARMOIRE, AND A1110, HEADWALL, FOR UTILITIES.

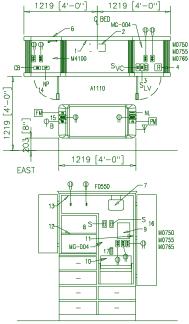

NOTES

- 1. RECEPTACLES ON CRITICAL POWER SHALL BE SERVED FROM DIFFERENT CRITICAL POWER TRANSFER SWITCHES.
- ALL RECEPTACLES IN HEADWALL SHALL BE HOSPITAL GRADE.

KEY NOTES

- DOWNLIGHT MOUNTED IN HEADWALL.
- AREA FOR MEDICAL GAS DROPS.
 THREE POSITION MOMENTARY CONTACT ROCKER SWITCH WITH CENTER "OFF" POSITION. SWITCH CONTROLS UP AND DOWN LIGHT FIXTURES IN HEADWALL VIA LOW VOLTAGE CONTROLLER.
- 4. LOW VOLTAGE CONTROLLER FOR CONTROL OF UP AND DOWN LIGHTS IN HEADWALL
- SWITCH CONTROLS CEILING MOUNTED
- INCANDESCENT DOWN LIGHT FIXTURES
 6. UPLIGHT MOUNTED IN HEADWALL.
- INFANT WARMER SYSTEM.
- 8. SWITCH IS FOR INFANT WARMER SYSTEM.
- INFANT RESUSCITATION SYSTEM.
 INFANT RESUSCITATION SYSTEM.
 FOLD DOWN BED.
 ACCESSORY MOUNTING RAILS.

- 12. ADJUSTABLE SHELF.
 13. AUTOMATIC EXHAUST FAN.
- 14. AUDIO/VISUAL TYPE NURSE CALL PATIENT STATION. PROVIDE CORD CONNECTED PATIENT CONTROL UNIT WITH NURSE CALL BUTTON, LIGHTING CONTROL, SPEAKER
- VOLUME AND TELEVISION CONTROL. 15 CONNECT RECEPTACLE TO CRITICAL BRANCH POWER SERVING THE PATIENT HEADWALL.
- 16. SWITCH CONTROLS CEILING MOUNTED
- LICHT FIXTURE ABOVE ARMOIRE. 17. VACUUM SLIDE.

WEST

General Notes:

- 1. For typical equipment mounting heights see "TYPICAL EQUIPMENT MOUNTING HEIGHTS" drawing.
- 2. MIL-STD-1691 data can only be accessed from the Equipment Plan.

L & D - LDR/LDRP (Wide) & TOILET, SHOWER, INPATIENT (LDRP2/TLTS2)

