


LOW VOLUME PHARMACY MANUFACTURING AND PREPACK

DESIGN NOTES

1. Construct all walls of masonry and GW and extend to the structure above.
2. Locate emergency flashing light(s) for the hearing impaired person(s).
3. Provide heavy gauge metal mesh door on Bulk Storage side with Keypad access.
4. Provide a visual alarm on the narcotics locker in the vault.
5. Provide a motion detector, wall mounted and facing the entry to the vault.
6. Provide touch key pad access to unit from adjacent corridor(s).

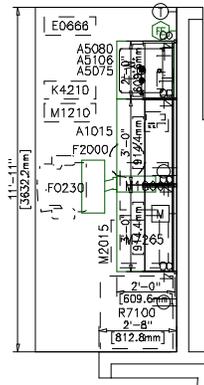

LEGEND

- Fire Extinguisher
- E.W. Eye Wash
- Thermostat
- Multiplex Comm/  
Data System
- Security Key Pad
- Security Alarm
- Security Motion Detector
- Duplex Electrical  
Outlet
- Quadruplex  
Electrical Outlet
- Electrical  
Panel
- P.E. Power Entry
- Heavy Gauge Metal Mesh Door

LOW VOLUME PHARMACY MANUF & PREPACK (PHMP1)

MILCARE

FLOOR/EQUIPMENT PLAN

DATE: 11/26/2002

5.45 NSM (59 NSF) MIN.

0 1000 2000



1:50 SCALE (MILLIMETERS)